


43 TELEPRINTER 5-LEVEL PAPER TAPE POWER SUPPLY

PARTS

1. GENERAL

- 1.01 This section provides information on maintenance parts for the 43 Teleprinter 5-Level Paper Tape Power Supply Assembly.
- 1.02 Whenever this section is reissued, the reason will be listed in this paragraph.
- 1.03 Part numbers are listed in the index in numerical order and indicate the page on which the parts appear. Parts are not maintenance spares but may be ordered separately for local repair of the Paper Tape Unit.
- 1.04 Troubleshooting, disassembly, and reassembly information for these sections is provided in Sections 574-508-300 and 574-508-720 respectively.
- 1.05 When ordering replaceable parts or components, unless otherwise specified, prefix each part number with the letters "TP" (ie, TP410055).

2. PARTS

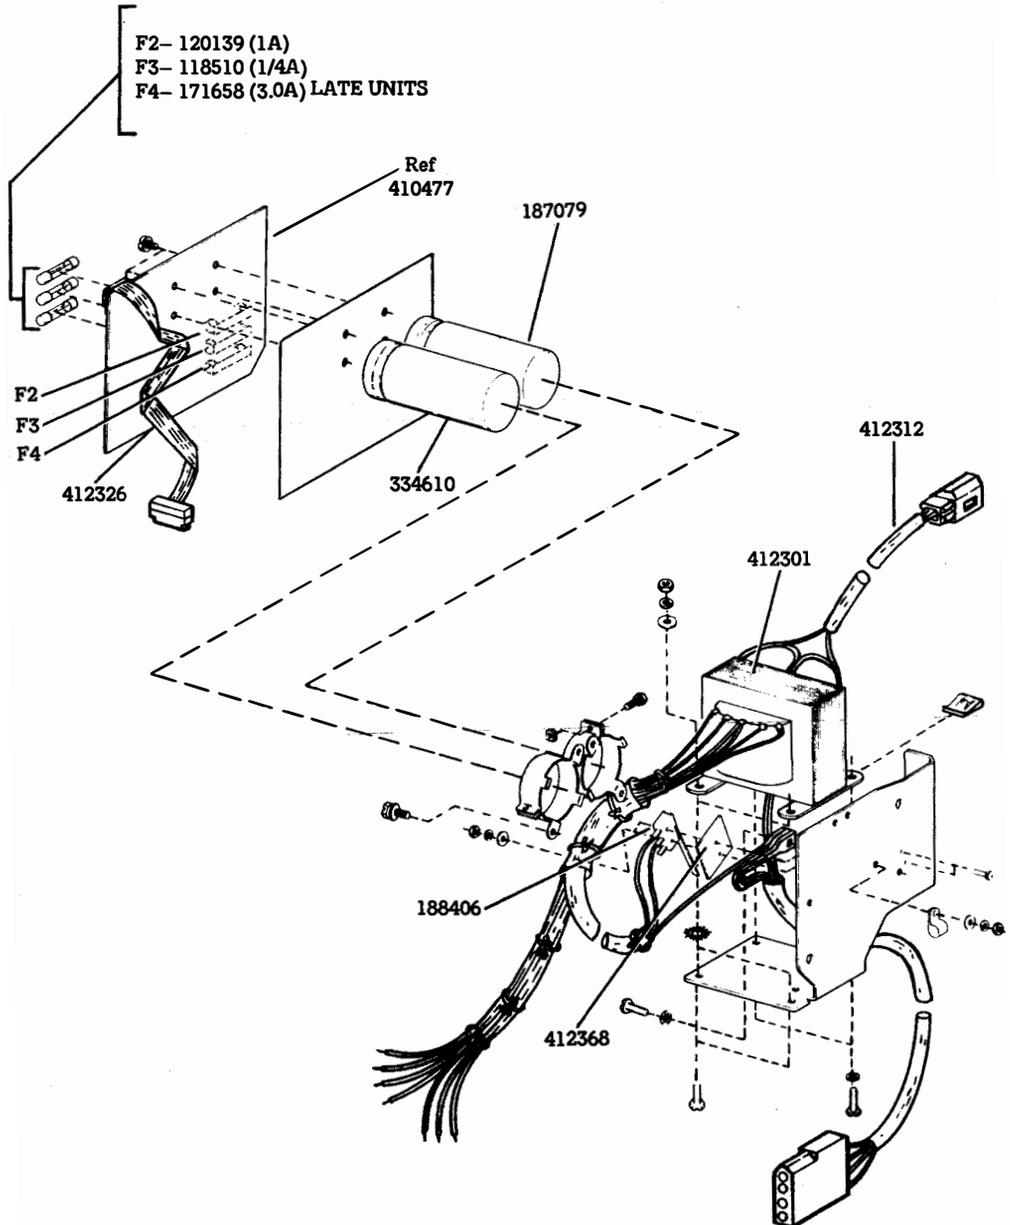

**3. NUMERICAL INDEX**

3.01 Parts listed are not maintenance spares but may be ordered as needed for local repair of major components or terminals.

Part Number	Description and Page Number	Part Number	Description and Page Number
118510	Fuse, 1/4 Amp 2	410477	Card, Circuit 2
120139	Fuse, 1 Amp 2	412301	Transformer 2
171658	Fuse, 3 Amp 2	412312	Cable 2
187079	Capacitor 2	412326	Cable Assembly 2
188406	Switch 2	412368	Insulator 2
334610	Capacitor 2		