BELL SYSTEM PRACTICES
Teletypewriter and Data Stations

SECTION P34.602 Issue 1, June, 1958 AT&TCo Standard

28C TRANSMITTER-DISTRIBUTOR UNIT LUBRICATION

	CONTENTS	PAR. NO.
1.	GENERAL	1.01-1.06
2.	PARTS TO BE LUBRICATED	2.01-2.15
3.	REFERENCE TO BELL SYSTEM PRACTICES	3.01

1. GENERAL

1.01 This section contains the lubrication procedures for the maintenance of the 28C transmitter-distributor unit, which uses a pivoted sensing-head.

1.02 Lubrication of the unit before it is placed in service should be governed by the principles given in Section P33.014. After that, because of varying conditions at each station, the unit should be lubricated as often as specified by local instructions.

1.03 The following recommended lubrication intervals are included as a guide for use under normal operating conditions.

Operating Speed		Lubrication Interval						
(Words per Minute)								
60		3 000	hr	or	1	yr*		
7 5		2400	hr	or	1	yr*		
100		1500	hr	or	6	mos		
200		1000	hr	or	4	mos		

^{*} Whichever occurs first.

- 1.04 The lubricants to be used and their methods of application are those specified in Section P30.011. The lubrication symbols used herein are the same as those given in that section. However, the simple symbol 0, which according to Section P30.011 indicates one or two drops of oil, is used in this practice to mean only one drop of oil. Symbols, such as 02, 03, or 020, are used herein to specify that two, three, or twenty drops respectively are to be applied at the points indicated.
- 1.05 The 28C transmitter-distributor unit should be lubricated in accordance with the following general information and with the specific instructions illustrated in Part 2.

(a) Lubricate all spring eyes with one drop of oil.

(b) Lightly oil all cam surfaces, sliding surfaces, and pivot points.

(c) Apply a light coating of grease to all gears.


(d) Saturate all felt oil retainers (felt lubricating washers and wicks) with oil.

Overlubrication, however, which would permit oil or grease to drip or be thrown on other points should be avoided. Special care should be taken to prevent oil or grease from getting on any contact point face.


1.06 The photographs in Part 2 show the paragraph numbers referring to particular line drawings of mechanisms and the location of these mechanisms on the unit. Parts in the line drawings are shown in an upright position unless otherwise indicated. If it is difficult to lubricate a part in the indicated position, the unit should be turned to a position in which the part is more accessible.


2. PARTS TO BE LUBRICATED

Note: The unit should be upside down for the lubrication shown in 2.01 to 2.03, inclusive.

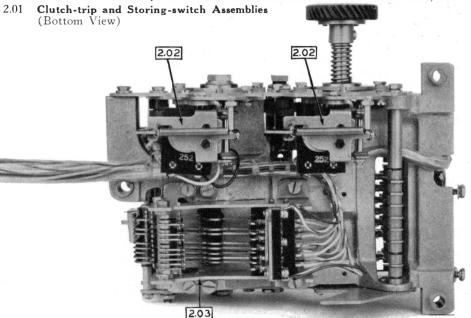

2.02 Clutch-trip Assemblies

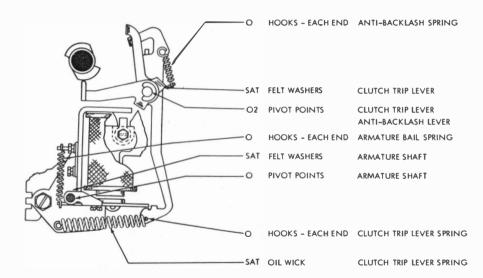


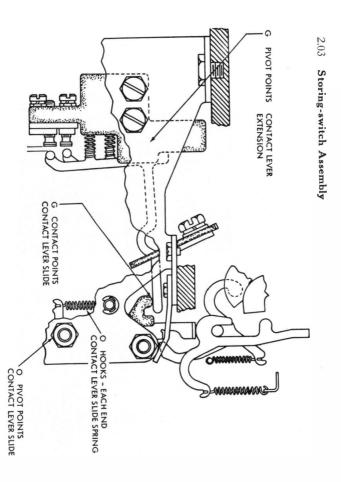


Note: The unit should be upright for the lubrication shown in 2.04 to 2.15, inclusive.

2.04 Distributor-block, Clutch, and Camsleeve Assemblies, etc.


(Top View)

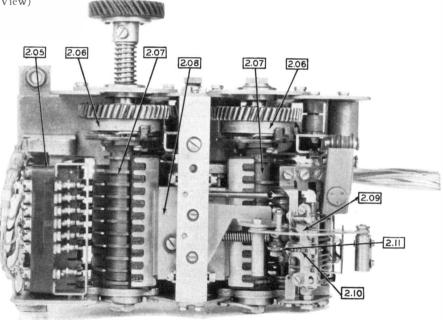

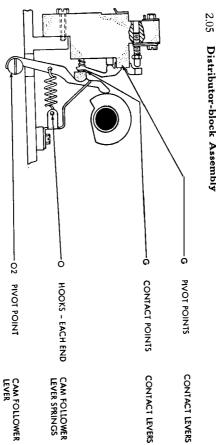



Distributor-block Assembly

2.06 Clutch Assemblies

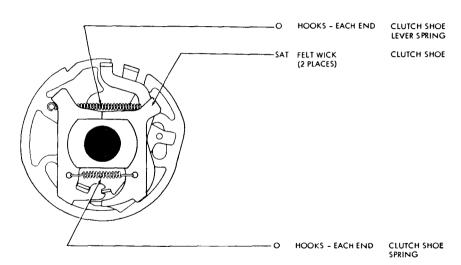

Camsleeve Assemblies

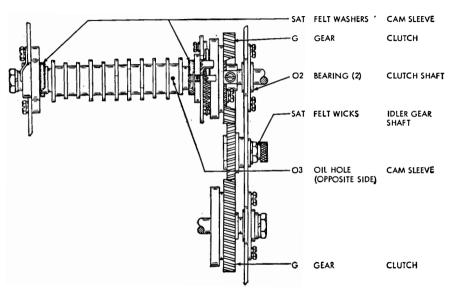

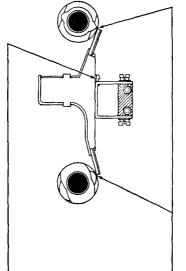


-SAT FILL HOLE


OIL RESERVOIR

- SAT LEATHER WICK CAM SLEEVES.


2.09 Pivoted Sensing-head

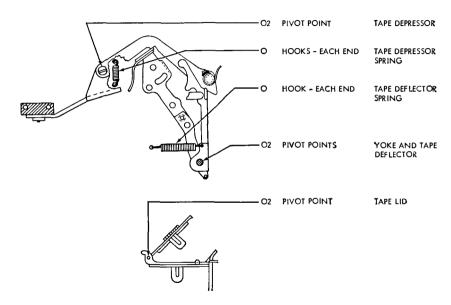


2.10 Check Pawl and Feed Wheel

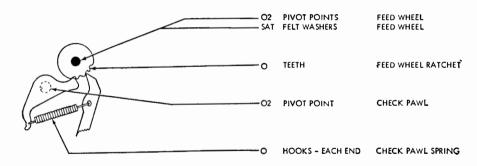


2.11 Feed Mechanism

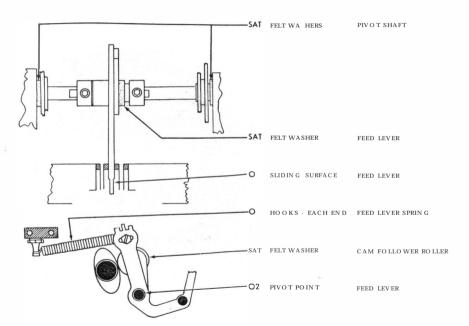


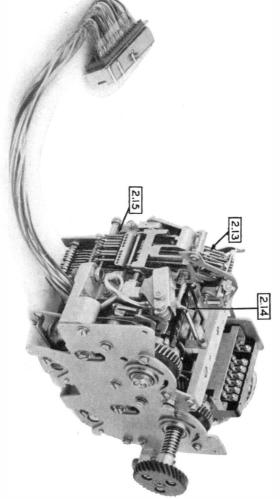


2.13 Sensing Mechanism

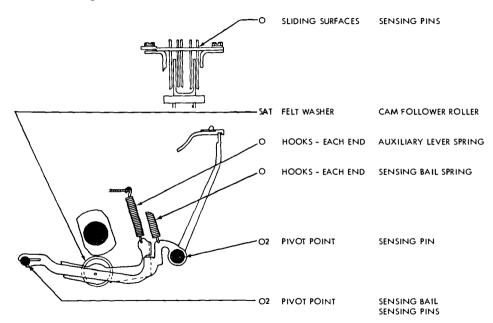

2.14 Sensing Mechanism (Cont'd)

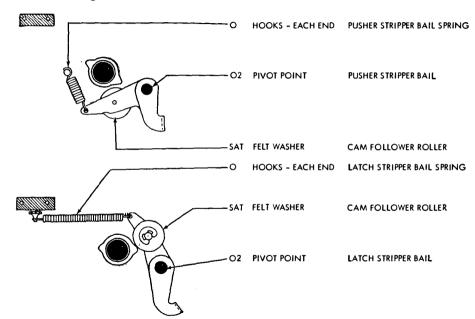

2.15 Sensing Mechanism (Cont'd)

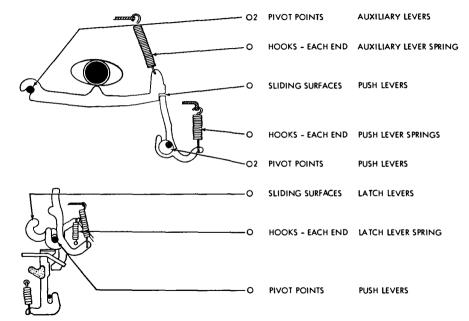

3. REFERENCE TO BELL SYSTEM PRACTICES

3.01 The following Bell System Practices contain information which may be required in connection with this practice.

Subject	Section
Teletypewriter Apparatus, General Requirements and Procedures	P30.012
Teletypewriter Apparatus, Lubrication, General Requirements	
Teletypewriter Apparatus, Preparation of Apparatus for Installation	
28C Transmitter-Distributor Unit, Requirements and Procedures	
28C Transmitter-Distributor Unit, Wiring Diagrams	
	1 07.004