Heathkit®Manual

for the

CROSSFIRE Model HD-3006

595-3232

HEATH COMPANY BENTON HARBOR, MICHIGAN 49022

-

Copyright © 1984 Heath Company All Rights Reserved Printed in the United States of America

TABLE OF CONTENTS

Introduction	Specifications
Assembly Notes	Circuit Description
Parts List	Semiconductor Identification Charts
Step-By-Step Assembly9	Circuit Board X-Ray View
Initial Tests 21	Schematic Diagram
Calibration	Warranty inside front cover
Operation	
In Case Of Difficulty 24 Troubleshooting Chart 25	Customer Service inside rear cover

INTRODUCTION

The Heathkit Model HD-3006 Crossfire is a visual

The HD-3006 Crossfire has a wide input voltage range and is compatible with almost any interface / terminal unit that has oscilloscope outputs for tuning. The Crossfire is a versatile tuning indicator that eliminates the need for an oscilloscope for this type of communication.

tuning indicator for radioteletype (RTTY) communication. There are sixteen LED's that make up the tuning display. The eight vertical LED's are for the mark signal and the eight horizontal LED's are for the space signal. When tuning in a signal, you tune for a maximum number of vertical and horizontal LED's.

Heathkit[®] _

PARTS LIST

Unpack the kit and check each part against the following list. The key numbers correspond to the numbers on the "Parts Pictorial" (Illustration Booklet, Page 1). Return any part that is packed in an individual envelope, with the part number on it, back to the envelope after you identify it until that part is called for in a step. Do not discard any packing material until after you locate all of the parts.

To order a replacement part, always include the PART NUMBER. Use the Parts Order Form furnished with this kit. If a Parts Order Form is not available, refer to "Customer Service" inside the rear cover of this Manual. For prices, refer to the separate "Heath Parts Price List."

104 B	HEATH Part No.	QTY.	DESCRIPTION	CIRCUIT Comp. No.	KEN No.		S. 2.	QTY. DESCRIPTION		CIRCUIT Comp. No.
ELE	CTRONIC	; COI	IPONENTS		Ele	ectronic	Co	mponents (Cont'd	i.)	
	E: The follow erance of 5%.	-	sistors are rated at 1/4-wat	t and have	NO [.] 1.	TES: Integrated	d circ	uits (ICs) may be marked f	for identifica	ation in any
A1	6-222-12	2	2200 Ω (red-red-red) resistor	R1, R6		of the follo	owing	four ways:		
A1	6-184-12	2	180 kΩ (brn-gry-yel) resistor	R2, R5			t num e nun	ber. hber. (This refers only to th	ne numbers	and letters
A2	10-946	2	500 kΩ control	R3, R4		show	wn in	bold print in the Parts Lis	t. Disregar	d any other
A3	21-140	2	.001 µF (1000 pF) ceramic capacitor	C1, C2				and letters on the IC.) ber and type number.		
A4	25-837	2	1.5 μF tantalum capacitor	C4, C5		d. Part	t num	ber with a type number othe	er than the	one listed.
A5	25-891	1	470 μF electrolytic	C3	2.	Some ICs	s are	packed in conductive foam	. Do not rei	move these

D13, D14,

D15, D16,

D17, D18,

D19, D20

			capacitor		
A6	56-56	2	1N4149 diode	D21, D22	1
A6	57-65	4	1N4002 diode	D1, D2,	1.4
				D3, D4	
A7	61-48	1	Rocker switch	SW1	
A8	150-94	1	Power cube		Ι.
A9	412-634	16	LED (light-emitting diode)	D5, D6,	
				D7, D8,	
				D9, D10	E
				D11, D12,	E

ICs from the foam until a step directs you to install them.

A10	442-54	1	UA7805 IC	U1
A11	442-718	2	LM3915 IC	U2, U3

HARDWARE

B1	250-1307
B 2	250-1325
B3	252-3
B4	254-1
B 5	255-49

#6 \times 1/4" sheet metal screw 4 6-32 × 1/4" screw 4 6-32 nut 7 #6 lockwasher 8 Round spacer 4

Page 8

Heathkiť

KEY No.	HEATH Part No.	QTY.	DESCRIPTION	CIRCUIT Comp. No.	KEY No.		QTY.	DESCRIPTION	CIRCUIT Comp. No.
CO	NNECTOR	rs —	SOCKETS		MIS	CELLANE	EOUS		
C1 C2 C3 C4 C5 C6 C7	432-72 432-73 432-196 432-907 434-42 434-310 438-4 NTED MA	2 1 1 2 2 2	Male terminal pin Female terminal pin 2-pin plug shell 2-pin socket shell Phono socket 18-pin IC socket Phono plug		E1 E2 E3	85-2955-1 90-1325-1 90-1326-1 261-29 344-52 344-55 490-5	1 1 4 24" 18" 1	Circuit board Top cover Chassis Foot Red wire Green wire Nut starter Package of solder	
D1 D2	390-2638 597-260	1 1 1	Front panel label* Blue and white label* Parts Order Form* Assembly Manual (See Pag for the part number.)	e 1					

*These items may be packed inside the Manual.



Section 1

Start at the top of Section 1 and install the following resistors. The sequence of the steps matches the locations of the components on the circuit board. NOTE: Make sure you installed resistor R6 in an earlier step.

- () R5: 180 kΩ (brn-gry-yel).
- C5: 1.5 μF tantalum. Make sure you position the marked end as shown.



NOTE: In some of the following steps, you will install diodes. Whenever you install a diode, always match the banded end of the diode with the band mark on the circuit board. A diode will not work properly if it is installed backwards.



- () D2: 1N4002 diode (#57-65).
- () D4: 1N4002 diode (#57-65).
- () D3: 1N4002 diode (#57-65).
- () Solder the leads to the foil and cut off the excess lead lengths.

Section 2

Install components in Section 2 of the circuit board as follows:

() D22: 1N4149 diode (#56-56).

NOTE: When you install ceramic capacitors, do not push the insulated portion of the leads into the circuit board holes. This could make it difficult to solder the leads to the foil.



-) C2: .001 µF (1000 pF) ceramic.
- () C1: .001 µF (1000 pF) ceramic.
- () D1: 1N4002 diode (#57-65).
-) R1: 2200 Ω (red-red-red).
-) D21: 1N4149 diode (#56-56).
- () R2: 180 k Ω (brn-gry-yel).
- C4: 1.5 μF tantalum. Be sure to match the marked end with the positive (+) mark on the board.
- () Solder the leads to the foil and cut off the excess lead lengths.

Refer to Pictorial 1-2 (Illustration Booklet, Page 2) for the following steps.

NOTES:

1. In the following steps, you will install IC sockets. To install an IC socket, make sure the pins are straight. Then start the pins into the circuit board holes. The index mark on the circuit board must still be visible after you install the socket. Solder the pins to the foil as you install each socket.



2. It is very easy to form a solder bridge between foils when you install an IC socket. After you install each socket, carefully inspect the foil for solder bridges and remove any that you find as described in the next column. If you suspect that you have a solder bridge, but are not positive, you can check your foil pattern To remove a solder bridge, hold the circuit board component-side-up as shown and hold your soldering iron tip between the two points that are bridged. The solder will flow down the soldering iron tip.



Install the IC sockets on the circuit board as follows:

() Two IC sockets at U2 and U3.

against the one shown on Page 28.

Page 14

Heathkiť

Use the procedure shown in Detail 1-2A when you are directed to install the ICs.

() U3, U2: LM3915 (#442-718).

The pins on the IC's may be bent out at an angle, so they do not line up with the holes in the IC socket. DO NOT try to install an IC without first bending the pins as described below. To do so may damage the IC pins or the socket, causing intermittent contact.



Before you install an IC, lay it down on its side as shown below and very carefully roll it toward the pins to bend the lower pins into line. Then turn the IC over and bend the pins on the other side in the same manner. Compare the IC to the drawing shown below. Then determine which end of the IC is the pin 1 end.



Position the pin 1 end of the IC over the index mark on the circuit board. Then start the IC pins into the socket. Make sure that all of the pins are started into the socket. Then push the IC firmly into the socket. NOTE: An IC pin can become bent under the IC and it will appear as though it is correctly installed in the socket.







Detail 1-2A

Heathkiť

 Place the chassis as shown in Pictorial 1-4 (Page 16) and slide four round spacers over the threaded studs. Then return to this page and complete the steps.

Refer to Pictorial 1-3 for the following steps.

() Turn the circuit board over so the foil side is up and position it so the part number 85-2955 is readable as shown.

NOTE: Before you install the following LED's, make sure the leads are straight.

Insert the LEDs (#412-634) into the circuit board holes at the following locations. When you install the LED's, make sure the shorter lead is positioned as called out in the Pictorial. DO NOT SOLDER ANY OF THE LEADS TO THE FOIL UNTIL YOU ARE INSTRUCTED TO.

- () D5, D7, D9, and D11.
- () D6, D8, D10, and D12.
- () D13, D15, D17, and D19.
- () D14, D16, D18, and D20.

16 LED'S (#412-634)



Refer to Pictorial 1-4 for the following steps.

- () Now position the circuit board in a vertical position so the component side is toward you and LED D19 is toward the top. Then place the board only part way onto the threaded studs.
- () Place a piece of cardboard against the front of the chassis and hold it tightly in place as you turn the chassis over onto its front.
- () Move each LED around by its leads until they are all seated into the chassis slots. Make sure the circuit board is against the spacers.
- () Solder only one lead of each LED to the foil.
- () Now remove the circuit board from the chassis. Also remove the spacers and set the chassis aside. Make sure all of the LEDs are straight across and spaced equally between each other. Then solder the other leads to the foil and cut off the excess lead lengths. NOTE: Leave the longer of the two leads slightly longer than the other lead when you cut them off. This will easily identify the anode lead and aide you in troubleshooting your unit later if it should become necessary.



Heathkiť

Refer to Pictorial 1-5 (Illustration Booklet, Page 2) for the following steps.

 Position the circuit board with the component side up as shown.

Install the remaining components on the circuit board as follows:

NOTE: Before you install the following electrolytic capacitor, look at it and identify the leads. One lead will have a positive (+) mark or a negative (-) mark near it. Be sure to install the positive lead in the positive-marked hole, or the negative lead in the negative-marked hole.



- C3: 470 µF electrolytic. Solder the leads to the foil and cut off the excess lead lengths.
- () U1: UA7805 IC (#442-54). Match the heat sink of the IC with the double outline on the board and insert the leads. Position the IC ¼" above the board, solder the leads to the foil, and cut off the excess lead lengths.

() R4, R3: 500 k Ω control (#10-946). Insert the control lugs and solder them to the foil.



Refer to Pictorial 1-6 (Illustration Booklet, Page 2) for the following steps.

NOTE: When you prepare the following wires, cut them to the lengths specified, and remove $\frac{1}{4}$ of insulation from the ends.

() Prepare the following wires:

Two 3¾" red One 7" red One 9½" red Two 6½" green

Connect and solder one end of these wires to the circuit board as follows. Cut off the excess lead lengths from the foil side. The other end of the wires will be connected later.



- () $3\frac{3}{4}$ red to hole C.
- () $3^{3}/4^{\prime\prime}$ red to hole D.
- () 7" red to hole E.
- () $9\frac{1}{2}$ red to hole F.
-) $6\frac{1}{2}''$ green to hole A.
- () $6\frac{1}{2}$ green to hole B.



CIRCUIT BOARD CHECKOUT

Carefully inspect the circuit board for the following most-commonly-made errors.

- Unsoldered connections.
- Poor solder connections.
- Solder bridges between foil patterns.
- Protruding leads which could touch together or touch the chassis when the circuit board is installed later.

Refer to the Pictorials where the parts were installed as you make the following visual checks:

- Diodes for the proper type and position of the banded end.
- Tantalum capacitors for the correct position () of the marked lead.
- ICs for the proper installation.
- LEDs for the proper installation.
- Electrolytic capacitor for the correct position of the positive (+) or negative (-) marked lead.

- Peel the backing from the four feet and install them on the bottom of the chassis about 1/4" in from each corner.
- Peel the backing from the blue and white label. () Install the label on the bottom of the chassis as shown in the Pictorial. Be sure to refer to the numbers on this label in any communications you have with the Heath Company about this kit.
- SW1: Position the rocker switch as shown and install it at SW1. Push the switch into the opening until it snaps into place.
- S1: Position the 2-pin socket shell so the beveled side is as shown. Then bend both tabs back and insert the shell into the opening at S1.

NOTE: Use the plastic nut starter to hold and start 6-32 nuts on screws.

Cut 1" off the narrow end of the nut starter () so it can be used easier in the following steps.

NOTE: If there is any paint on the inside of the chassis at locations J1 and J2, be sure to scrape it off before you install the phono sockets in the following steps.

Set the circuit board aside temporarily until it is called for in a step.

CHASSIS ASSEMBLY

Refer to Pictorial 1-7 for the following steps.

- Position the chassis as shown.
- Carefully peel the backing from the front panel label and install the label on front of the chassis. Make sure it is lined up properly with the openings in the chassis.

- () J1: Position a phono socket as shown and install it at J1. Use two 6-32 \times ¹/₄" screws, #6 lockwashers, and 6-32 nuts.
- J2: Position the other phono socket as shown () and install it in the same manner at J2.
- Place the four round spacers and four #6 () lockwashers on the threaded studs. Inspect the LED's on the foil side of the circuit board to make sure they are still lined up properly. Then position the board so that LED D19 is as shown and install the board on the spacers with three 6-32 nuts. NOTE: No nut will be used on the indicated stud.



Heathkit[®] _



Refer to Pictorial 1-8 (Illustration Booklet, Page 3) for the following steps.

Connect the wires coming from the circuit board to the chassis in the following steps. Solder the wires as you connect them.

- () Route the red wires coming from holes C and D down between the two controls. Then route the four red wires along the right side of the circuit board as you view it from the back.
- () Connect the red wire coming from hole C to lug 1 of SW1.
- () Connect the red wire coming from hole D to lug 2 of SW1.
- () Connect the red wire coming from hole E to lug 1 of J2.
- () Connect the red wire coming from hole F to lug 1 of J1.
- () Refer to inset #1 and install a male terminal pin on the end of each green wire.

NOTE: When you insert the pins into the plug shell in the next two steps, make sure they lock in place.

() Insert the pin on the green wire coming from hole B in hole 1 of S1.



- () Insert the pin on the green wire coming from hole A in hole 2 of S1.
- () Route all of the wires against the chassis as shown.

Refer to Pictorial 1-9 for the following steps.

In the following steps, you will install female terminal pins and a 2-pin plug shell on the ends of the power cube leads.

- () Prepare the ends of both leads and install the female terminal pins as shown.
- () Cut off both tabs from the 2-pin plug shell.
- () Position the shell with the bevel as shown and insert the lead with the stripe in hole 2. Insert the plain lead in hole 1.

This completes the assembly, except the top cover, which you will install later. Check the inside of the chassis for any bits of solder or cut leads. Then proceed to the "Initial Tests".

INITIAL TESTS

If a volt-ohmmeter is available, perform the following tests. If a meter is not available, proceed to the "Calibration."

Refer to Pictorial 2-1 (Illustration Booklet, Page 3) for the following steps.

If you do not get the proper reading in a step, reverse the meter leads and take another reading. If you still do not get the proper results, refer to the "In Case Of Difficulty" section of the Manual and the Schematic Diagram. Also, review the Circuit Description.

NOTE: Do not plug in the power cube at this time.

- Place the OFF-ON switch (SW1) to ON.
- Set your ohmmeter to the $R \times 100$ range.
- Connect one of the ohmmeter leads to chassis ground.
- Take a reading from either lug of switch SW1 ()to ground. The reading should be greater than 1000 Ω.

- Take a reading from the indicated common foil ()of the 16 LEDs to ground. The reading should be greater than 2500Ω .
- Take a reading from pin 1 and pin 2 of socket S1 to ground. Each reading should be greater than 20 k Ω .
- Plug the power cube into an AC outlet. Then ()insert the plug into socket S1 on the chassis.
- Set your volt-ohmmeter to DC volts and to the 15-volt range.
- Connect the common lead of the meter to chassis ground.
- Take a reading at either lug of switch SW1. () The reading should be 13.4 volts \pm 10%.
- () Take a reading at the indicated common foil of the 16 LEDs. The reading should be 5.0 volts ± 10%.
- Disconnect the meter leads.

This completes the Initial Tests; proceed to "Calibra-

Set your ohmmeter to the $R \times 1000$ range.

tion."

CALIBRATION



NOTE: You will need two shielded cables to connect your HD-3006 to your interface/terminal unit. Two phono plugs are supplied that you will install on one end of these cables. The other end of these cables are connected to your interface/terminal unit with the correct style of connector.

- () Install the phono plugs on one end of the cables as shown below.
- () Figure 1 shows a typical hookup between the HD-3006 Crossfire, a terminal unit, and a receiver. Connect these units together as shown.

Refer to Pictorial 2-1 (Illustration Booklet, Page 3) for the locations of the controls, LEDs, and switch in the following steps.

- () Make sure the power cube is plugged into an AC outlet and into socket S1 of the Crossfire.
- () Turn the ON-OFF switch (SW1) ON.



-) Tune your receiver to an RTTY signal.
-) Adjust the AF gain on your receiver for normal operating level.
- () Tune your receiver off station so that all you hear is background noise. NOTE: If you can not obtain the following results, disregard steps 1 and 2 and perform Steps 3, 4, and 5 instead.
- 1. () Adjust control R3 to the point before LED D5 just starts to light.
- 2. () Adjust control R4 to the point before LED D13 just starts to light.
- 3. () Tune your receiver to a strong RTTY signal.



- Adjust control R3 to the point where LED's 4. () D11 and D12 just light.
- Adjust control R4 to the point where LED's 5. () D19 and D20 just light.

This completes the Calibration.

Refer to Pictorial 3-1 and install the top cover on the chassis with four #6 \times 1/4" sheet metal screws.

This completes the assembly, proceed to the "Operation."



OPERATION

The following information describes the function of your HD-3006 Crossfire.

RTTY DISPLAY – The vertical LEDs are for the mark channel and the horizontal LEDs are for the space channel. When you tune your receiver, try for the maximum number of "lit" mark and space LEDs on the display. Normally, there will be more mark LEDs indicating than space LEDs. This is due to shifting of the mark-to-space condition; the space signal being in the "on" state for a shorter period of time than the mark signal. With exceptionally strong signals, the mark and space indications may be equal.

Assuming that the sensitivity is adjusted to the same level for each channel and the receiver is tuned correctly, some of the space LEDs may indicate when only a mark signal is present. This is due to the coupling between the filters in the interface or terminal unit.

The mark and space LED's will light in the following manner: Starting from the center, the mark LED's will light alternately until the last one on each end is reached, and then these will come on simultaneously. The space LED's will operate in the same manner.

Depending on the setting of the receiver sensitivity control, there may be random flashing of some LEDs during a no-signal condition. This is due to the receiver noise and limiter action in the interface or terminal unit.

OFF-ON Switch – Turns the unit On or Off.

8-16V AC/DC 150 mA Power Socket - The power cube or any power source that is capable of these requirements may be plugged into this socket. If you use a DC power supply, the polarity does not matter.

SPACE Socket - The space cable from the interface or terminal unit plugs into this socket.

MARK Socket - The mark cable from the interface or terminal unit plugs into this socket.

Heathkiť

IN CASE OF DIFFICULTY

This part of the Manual will help you locate and correct any difficulty that might occur in your Crossfire. This information is divided into two sections. The first section, "General," contains suggestions for reviewing your kit to locate possible causes of incorrect performance.

The second section is a "Troubleshooting Chart." This chart calls out specific problems that may occur and lists one or more conditions or components that could cause each difficulty.

NOTE: In an extreme case where you are unable to resolve a difficulty, refer to "Customer Service" information inside the rear cover of this Manual. Your Warranty is located inside the front cover.

GENERAL

 Recheck the wiring. Trace each lead in colored pencil on the Pictorial as you check it. It is frequently helpful to have a friend check your work. Someone who is not familiar with the unit may notice something you consistently overlook. tip between the two points that are bridged until the excess solder flows **down** onto the tip of the soldering iron.

- Check integrated circuits for proper positioning and for good contact at each pin connection.
- 6. Check capacitor values carefully. Be sure the proper part is wired into the circuit at each capacitor location. For example, it would be easy to mistake a .001 μ F capacitor for 100 pF capacitor. Check each electrolytic capacitor to be sure the lead near the positive (+) marking is at the correct position.
- 7. Check each resistor value carefully. It would be easy, for example, to install a 2200 Ω (red-red-red) resistor where a 220 Ω (red-red-brown) resistor is called for. A resistor that is discolored, or cracked, or shows any sign of bulging indicates that it is faulty and should be replaced.
- 8. Be sure the correct diode is installed at each diode location, and that the banded end is positioned correctly.
- 2. Check for bits of solder, wire ends, or other foreign matter which may be lodged in the wiring.
- 3. About 90% of the kits that are returned for repair do not function properly due to poor connections and soldering. Therefore, you can often eliminate many troubles by reheating all connections to make sure they are soldered properly, as described in the soldering instructions in this Manual.
- 4. Check each circuit board foil to be sure there are no solder bridges between adjacent connections. Remove any solder bridges by holding a clean soldering iron
- 9. Check all component leads connected to the circuit board. Make sure the leads do not extend through the circuit board and come in contact with other connections or parts, such as the chassis.
- 10. If you still cannot locate the trouble and a voltmeter is available, check the voltage readings against those shown on the Schematic Diagram. A review of the "Circuit Description" may also help you locate the trouble.

NOTE: To remove faulty multi-lead components from a circuit board, clip all the leads, and then unsolder and remove them one at a time.

NOTE: Refer to the "Circuit Board X-Ray View" on Page 28 of this Manual for the physical location of parts.

Troubleshooting Chart

This Troubleshooting Chart lists specific problems that could occur and some possible causes. The numbers for the components are the same numbers used in the Schematic Diagram and Circuit Description. A Circuit Board X-ray View is provided on Page 28 to help you locate any circuit board component. If a component is indicated (such as U1 for example), check that part and any other components associated directly with it to see if they are installed correctly.

PROBLEM	POSSIBLE CAUSE			
No 13.4 volt supply.	1. Diodes D1-D4. 2. Capacitor C3. 3. Switch SW1.			

		Cs U2,U3. ower cube.
No 5-volts, but 13.4 volts is present.	1. IC	CU1.
Have supply voltage, but not all LEDs light.	2. D 3. K 4. C	ED installed incorrectly. Diodes D21, D22. C's U2, U3. Controls R3, R4 misadjusted. Signal not strong enough.

Heathkiť

SPECIFICATIONS

Display	Two 8-LED bars. Each bar requires approximately 14 dB no-signal-to signal voltage ratio (5:1) for full use of the bar.
Input Level	
Threshold	AC, 0.3 volts RMS. DC, 0.5 volts.
Maximum	AC, 15 volts RMS. DC, 15 volts.
Power Supply	8-16 volts AC/DC power cube at 150 mA typical.
General	
Dimensions	$3\frac{3}{16}$ high \times 5" wide \times 4" deep (8.1 \times 12.7 \times 10.0 cm).
Net Weight	2.3 lbs (1.0 kg).

The Heath Company reserves the right to discontinue products and to change specifications at any time without incurring any obligations to incorpo-

rate new features in products previously sold.

CIRCUIT DESCRIPTION

Refer to the Schematic Diagram (Illustration Booklet, Page 4) as you read this description.

The space and mark signals are routed through sensitivity controls R3 and R4 and diodes D21 and D22 to the input of driver ICs U2 and U3. U2 and U3 are log LED drivers that drive LED's D5 through D20 for mark and space indications. D21 and D22 rectify the AC mark and space signals, while resistors R2 and R5 and capacitors C4 and C5 form filter timing networks. The timing networks reduce the effect of noise bursts. Once the input level exceeds the threshold set by the sensitivity controls, R3 and R4, ICs U2 and U3 will start turning on LED's D5 through D20. As the input level increases, more LEDs are turned on. Resistors R1 and R6 provide a reference voltage for ICs U2 and U3.

Diodes D1 through D4 and capacitor C3 form a bridge rectifier-filter circuit. Capacitors C1 and C2 are line bypass filters. IC U1 is a 5-volt regulator for LEDs D5 through D20.

SEMICONDUCTOR IDENTIFICATION CHARTS

DIODES

CIRCUIT COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
D21, D22	56-56	1N4149	IMPORTANT: THE BANDED END OF DIDDES CAN BE MARKED IN A NUMBER OF WAYS.
D1, D2, D3, D4	57-65	1N4002	BANDED END (CATHODE)
D5, D6, D7, D8 D9, D10, D11, D12, D13, D14, D15, D16, D17, D18, D19, D20	412-634	Light-emitting diode (LED)	ANODE CATHODE SHORTER LEAD

INTEGRATED CIRCUITS

CIRCUIT HEATH MAYBE COMPONENT PART REPLACED IDENTIFICATION NUMBER NUMBER WITH



CIRCUIT BOARD X-RAY VIEW

NOTE: To find the PART NUMBER of a component for the purpose of ordering a replacement part:

- A. Find the circuit component number (R5, C3, etc.) on the "X-Ray View."
- B. Locate the same number in the "Circuit Component Number" column of the "Parts List" in the front of this Manual.
- C. Adjacent to the circuit component number, you will find the PART NUMBER and DESCRIPTION which must be supplied when you order a replacement part.



SHOWN FROM COMPONENT SIDE (The foil on the component side is shown in red)

ILLUSTRATIC

PARTS P





A2











N BOOKLET CTORIAL





Copyright © 1984 Heath Company All Rights Reserved Printed in the United States of America

E4











Page 2











SCHEMATIC OF THE HEATHKIT® CROSSFIRE MODEL HD-3006

NOTES:

- ALL RESISTORS ARE IN OHMS (K.1,000). ALL RESISTORS ARE 1/4-WATT,5%.
- 2. ALL CAPACITOR VALUES ARE IN µF (MICROFARADS).
- 3. REFER TO THE CIRCUIT BOARD X-RAY VIEW FOR THE PHYSICAL LOCATION OF PARTS.
- 4. VOLTAGES TAKEN WITH NO SIGNAL INPUT.

LEGEND:

- 1. V CIRCUIT BOARD GROUND
- 2. --- MALE CONNECTOR
- 3. FEMALE CONNECTOR
- 4. --- CONNECTION
- 5. O CONNECTION TO CIRCUIT BOARD





8















Not to be resold

Technology Systems

PLEASE REPORT VOILATIONS TO WWW.TECH-SYSTEMS-LABS.COM