28 TYPING REPERFORATOR CABINETS, TABLES, AND COVERS REQUIREMENTS AND ADJUSTMENTS

		CONTENTS	PAGE	į
1.	GE	NERAL	. 1	
2.	RE	QUIREMENT AND ADJUSTMENTS	. 2	
	A.	Cover		
	в.	Friction arm	. 2	
		Front door catches Front doors Line shunt contacts Line shunt contact springs Rear door catches Rear doors	. 4 . 6 . 6	


1. GENERAL

1.01 This section contains the requirements and adjustments for the 28 typing reperforator enclosures. This section and the section covering teletypewriter general requirements and adjustments provides the adjusting information necessary to maintain the enclosures.

2. REQUIREMENTS AND ADJUSTMENTS


A. Cover

2.01 Cover

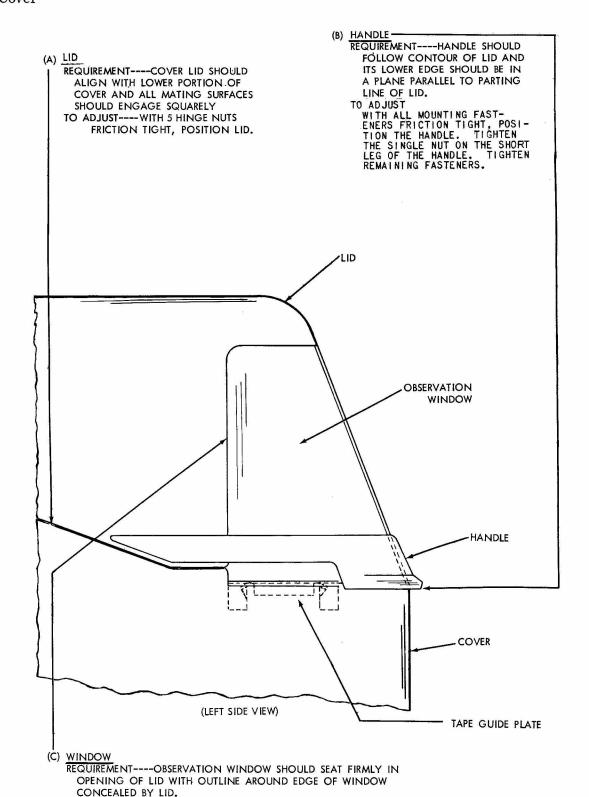

TO ADJUST----WITH WINDOW MOUNTING NUTS FRICTION TIGHT,

POSITION WINDOW.

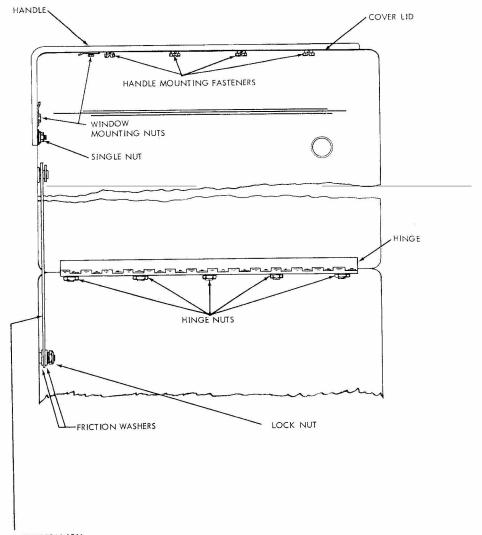


FRICTION ARM


REQUIREMENT----WITH LID IN ITS UPPERMOST POSITION, IT SHOULD REQUIRE A LIGHT
PRESSURE TO MOVE LID DOWNWARD. (LID SHOULD NOT FALL OF ITS OWN WEIGHT).
TO ADJUST----TIGHTEN OR LOOSEN FRICTION WASHER ASSEMBLY LOCK NUT.

B. Multiple Cabinet

2.02 Multiple Cabinet (Front)

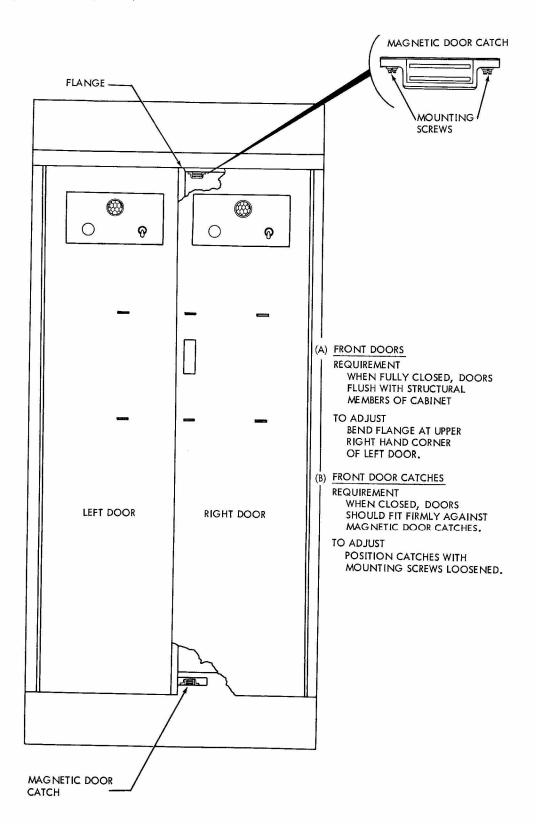

2.03 Multiple Cabinet (Rear)

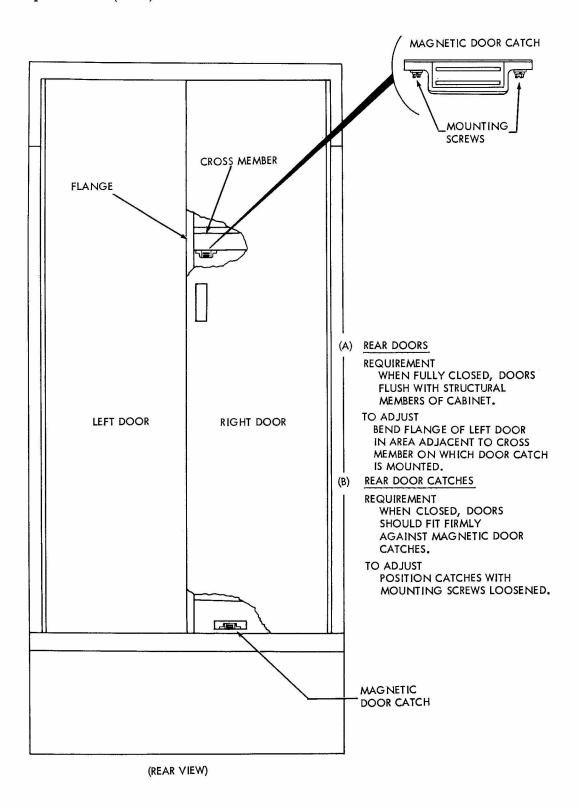

2.04 Line Shunt Contact Assembly

